



Acer Iconia Tab 8 A1-840 Buttons Replacement

Replace the volume and power buttons

Written By: [taylerdurtschi](#)



INTRODUCTION

The volume and power button are assembled to the inside panel of the device. Both buttons will need to be replaced as they are combined into one piece.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Power off the device
- Remove any cables that might be connected to your device
- Make sure the device is placed on a flat surface with the display screen facing up

Step 2




- Wedge the plastic opening tool in between the display screen and back panel
- ⚠ Do not apply too much pressure in order to avoid cracking the screen

Step 3



- Carefully separate the display from the back panel

Step 4 — Buttons

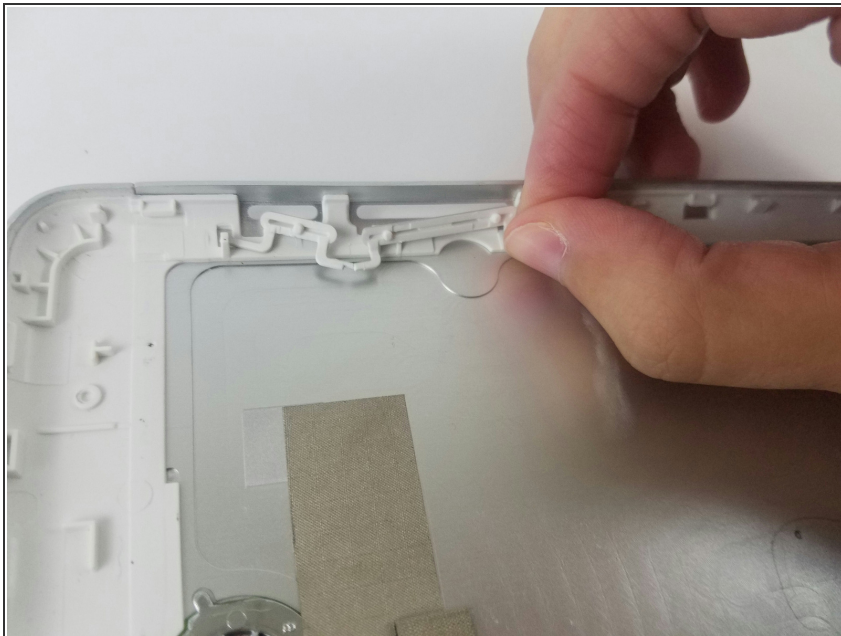

- Remove the buttons from the back panel using your fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 09:52:40 PM.